

# USER MANUAL

---

## DMP-3 Multi-Media player

---

Version 08.1a

Before connecting, operating or adjusting this product, please read these instructions completely. Please keep this manual of future reference.

Product and brand names mentioned in this manual are trademarks of registered trademarks of their respective holders.

Specification is subject to change without notice.

## Important Information



Please do not open or remove the cover plate because it may generate a high voltage shocking or other dangers.



Please do not precede the maintenance or repairing of this unit by yourself. Carefully read the instruction manual before use, and keep the manual for future reference.

*Please read and comply with all warnings, cautions, and the manual thoroughly. You might lose your warranty if you modify or revise this item in such a manner not approved by this manual.*

- AC cords enclosed in this product are for 110V or 220V.
- If any liquid or solid objects fall inside the cabinet, unplug the set immediately and have it checked by qualified service personnel before operating it again.
- Never add any attachments and/or equipments without approval of the manufacturer. Such additions can increase the risk of fire, electric shock, or other personal injury.

## Important Warnings and Safety Precautions

- Read instructions- all the safety and operating instructions should be read before the product is operated.
- Keep the safety and operating instructions for future reference.
- Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in fire or electric shock. Never spill liquid of any kind on the product.
- Do not remove/insert the plug into the socket with wet hands in order to prevent electric shock.
- Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
- Do not attempt to service this product by yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all services to qualified service personnel. The manufacturer will not be responsible for any injuries or damage caused to the product.
- AC cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, pay attention particularly to cords at plugs, convenience receptacles, and the points where they exit from the product.
- Unplug the unit from the wall outlet before cleaning. Use a damp cloth; do not use liquid or aerosol cleaners. Please refer to the cleaning instruction.
- Do not place the product on an unstable cart, stand, tripod, bracket, or table where it may fall. A falling unit can cause serious injury to a child or adult and serious damage to the appliance. Follow the manufacturer's instructions when mounting the unit, and use a mounting accessory recommended by the manufacturer.
- The unit is designed with slots in the cabinet for ventilation to protect it from overheating. Do not block these openings with any object, and do not place this unit on a bed, sofa, rug, or other similar surfaces. Do not place it near a radiator or heat register.
- The plug provided by this unit will fit into the power outlet in only one way. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug still does not fit, contact your electrician to replace your outlet.
- Use wall or ceiling mounts when mounting the product on a wall or ceiling, be sure to install the product according to the method recommended by the manufacturer.
- For safety reasons, do not leave children along with the unit. **DO NOT ALLOW CHILDREN TO CLIMB ON THE UNIT.**



## ***Contents***

1.	INTRODUCTION.....	1
	Product Description .....	1
	Product Features .....	1
	Package Contents .....	2
	Assembly and Connection.....	2
2.	SYSTEM SETUP .....	3
	Remote Control function .....	3
3.	ON SCREEN DISPLAY OPERATING INSTRUCTIONS .....	4
	Main Screen .....	4
	Photo operate screen.....	5
	Music operate screen.....	5
	Video operate screen .....	6
	File operate screen.....	6
	Device operate screen.....	6
	Setup screen.....	7

# **1. INTRODUCTION**

## ***Product Description***

Thank you for choosing the DMP-3 Multi-Media Player and for your continued support and use of our products.

This compact media player allows you to play back high quality HD image for JPEG files as well as video files by scaler for video up conversion to achieve 1080i.

## ***Product Features***

- HD component output for 720p/1080i JPEG display.
- Scaler for video up-conversion to 720p/1080i.
- MPEG-4 simple profile video support.
- Support file format: Ware, AAC, MP3, WMA, BMP, TIFF, PNG, GIG JPEG, Progressive JPEG, Motion JPEG, MPEG-1, MPEG-2, MPEG-4.
- Built-in remote receiver, easy operation.
- Firmware can be upgraded by using flash memory card.
- NTSC/PAL encode with three video DACs for composite, YPbPr and RGB video output.
- Power-on play: automatically play.

## ***Package Contents***

Please check the package to make sure it contains the following items



DMP-3



Remote controller



AC Adaptor



YPbPr Cable



CVBS Cable (option)



User Manual

## ***Assembly and Connection***



CF card slot

IR Receive Power LED



Power switch

DC Input


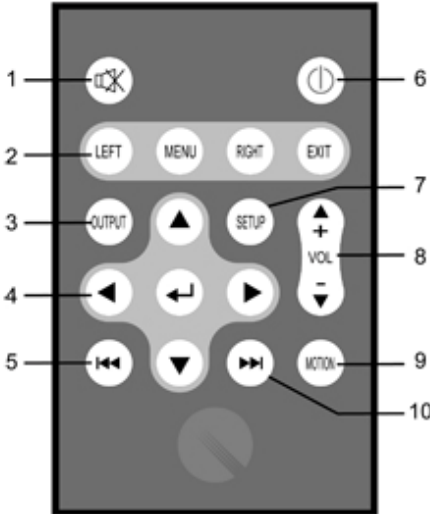 

VGA / YPbPr  
video output

CVBS output  
(option)

Audio output

## 2. SYSTEM SETUP

### *Remote Control function*

No	Key name	Description	Monitor Remote Control Unit
1		Turn off volume	
2	LEFT / MENU / RIGHT / EXIT	No function	
3	Output	Change video out mode	
4	◀/▲/▶/▼/ ↵	For navigation key / Confirm function	
5	⏮	Previous file	
6		Power standby on or off	
7	Setup	No function	
8	VOL + / -	Adjust volume up / down	
9	Motion	No function	
10	⏭	Next file	

### 3. ON SCREEN DISPLAY OPERATING INSTRUCTIONS

 
#### *Main Screen*



- ✧ Plug-in CF card and turns on power, 6 function icons will be displayed for selection.
- ✧ Click arrow key ◀/▶/▲/▼ of remote control to select auto power-on play.  
Note: Pressing the arrow key ◀/▶/▲/▼ during looping will interrupt the play mode. To retrieve the mode please turn off the power and reboot again.
- ✧ Use arrow key ◀/▶/▲/▼ for the selection movement. Use enter key ↵ to enter / confirm the selection.  
Note: When on CF card detected, you can only execute "Setup". (All other functions will be disabled.)




## Photo operate screen

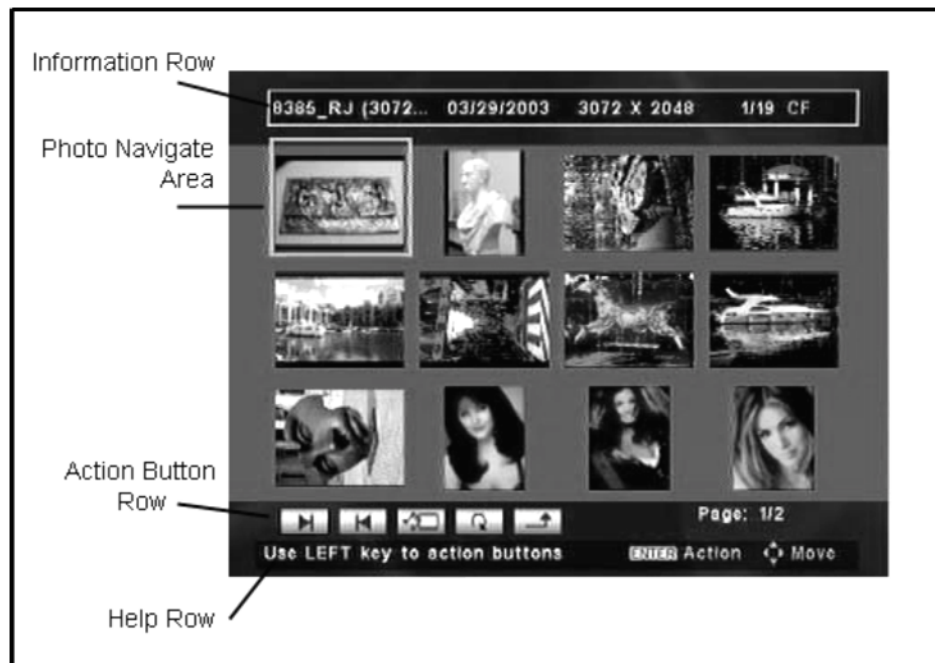

- ✧ Information Row and Help Row display subject to the setting of OSD.
- ✧ Please use arrow key ◀/▶/▲/▼ as movement, Use enter key ↵ as confirmation.
- ✧ When cursor is at first menu photo, press arrow key ◀ will link to action button row °.
- ✧ This screen will not be displayed if there is no photo file format in you CF card.

## Music operate screen

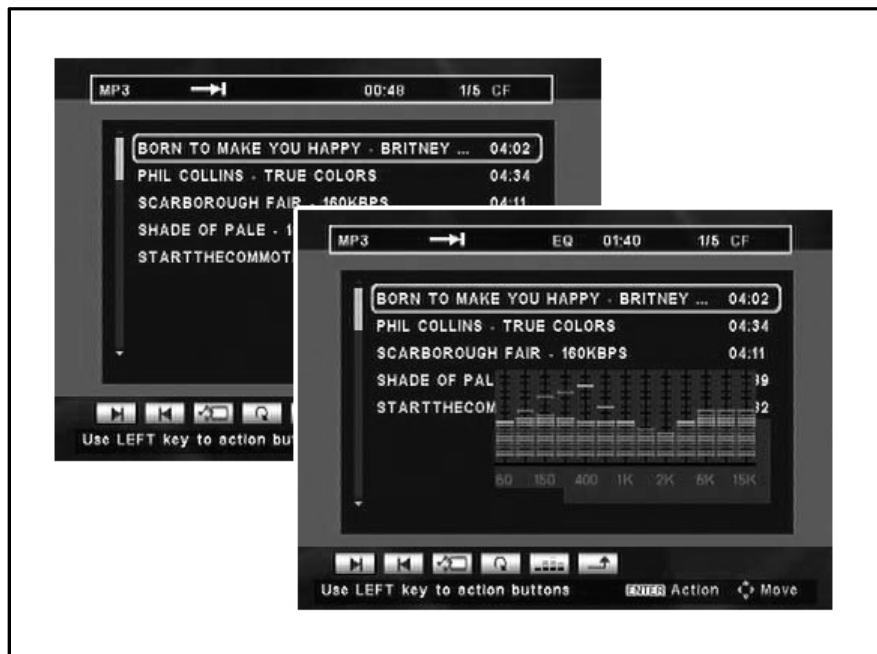 

### *Video operate screen*



 
### *File operate screen*



### *Device operate screen*

Non-active screen of user.

## Setup screen

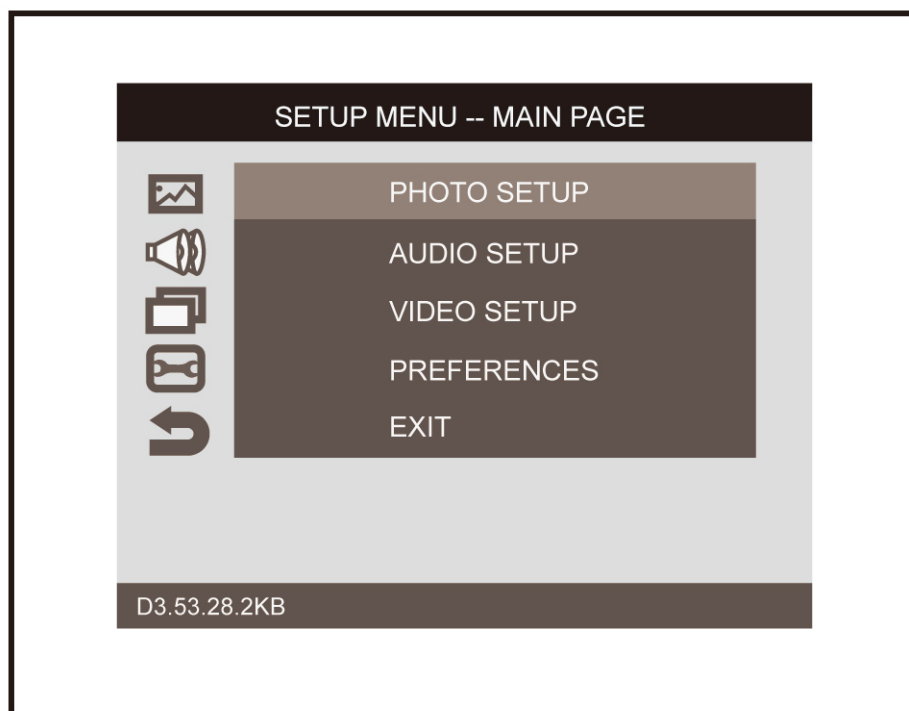

## PHOTO SETUP – THUMBNAIL DIGEST

Level 1	Level 2	Level 3/Function
<b>PHOTO SETUP</b> AUDIO SETUP VIDEO SETUP PREFERENCES EXIT	<b>THUMBNAIL DIGEST</b> PHOTO DISPLAY SIZE SLIDESHOW MODE INTERVAL TIME TRANSITION MAIN PAGE	ON / ZOOM / OFF  Icon set up ◆ <b>ON</b> : Reduce the icon into smaller size ◆ <b>ZOOM</b> : Reduce in 4:3 proportions. ◆ <b>OFF</b> : Remain the icon size as it is.

*Note: about the remote control key operate, is suitable for the following explanation.*

1. Use ▲/▼/▶/◀ for movement among selection.
2. Use ↵ as enter / confirmation.

## PHOTO SETUP – PHOTO DISPLAY SIZE

Level 1	Level 2	Level 3/Function
<b>PHOTO SETUP</b> AUDIO SETUP VIDEO SETUP PREFERENCES EXIT	THUMBNAIL DIGEST <b>PHOTO DISPLAY SIZE</b> SLIDESHOW MODE INTERVAL TIME TRANSITION MAIN PAGE	BEST FIT / DEFAULT  Photo setup ◆ <b>BEST FIT:</b> Regardless photo size and adjust to best fit of screen. ◆ <b>DEFAULT:</b> Display as original photo size.

## PHOTO SETUP – SLIDESHOW MODE

Level 1	Level 2	Level 3/Function
<b>PHOTO SETUP</b> AUDIO SETUP VIDEO SETUP PREFERENCES EXIT	THUMBNAIL DIGEST PHOTO DISPLAY SIZE <b>SLIDESHOW MODE</b> INTERVAL TIME TRANSITION MAIN PAGE	MANUAL / AUTO  How to activate slideshow ◆ <b>MANUAL:</b> Manually. ◆ <b>AUTO:</b> Auto on.

## PHOTO SETUP – INTERVAL ITME

Level 1	Level 2	Level 3/Function
<b>PHOTO SETUP</b> AUDIO SETUP VIDEO SETUP PREFERENCES EXIT	THUMBNAIL DIGEST PHOTO DISPLAY SIZE SLIDESHOW MODE <b>INTERVAL TIME</b> TRANSITION MAIN PAGE	1 / 3 / 5 / 10 SECONDS  Default slideshow interval timing last.

## PHOTO SETUP – TRANSITION

Level 1	Level 2	Level 3/Function
PHOTO SETUP	THUMBNAIL DIGEST	Full Screen / Top->Bottom / Bottom->Top / .... / Implose / Cross fade / Random Determine the effect of change page between slides.
AUDIO SETUP	PHOTO DISPLAY SIZE	
VIDEO SETUP	SLIDESHOW MODE	
PREFERENCES	INTERVAL TIME	
EXIT	TRANSITION	
	MAIN PAGE	

## AUDIO SETUP – SPDIF OUTPUT

Level 1	Level 2	Level 3/Function
PHOTO SETUP	SPDIF OUTPUT	OFF / SPDIF/RAW / SPDIF/PCM
AUDIO SETUP	MAIN PAGE	
VIDEO SETUP		Non-active screen of user.
PREFERENCES		
EXIT		

## VIDEO SETUP – VIDEO OUTPUT

Level 1	Level 2	Level 3/Function
PHOTO SETUP	VIDEO OUTPUT	YPbPr / RGB
AUDIO SETUP	TV MODE	
VIDEO SETUP	VIDEO FULL SCREEN	Video output set up
PREFERENCES	DIVX SUBTITLE	
EXIT	SUBTITLE LANGUAGE	
	MAIN PAGE	

## VIDEO SETUP – TV MODE

Level 1	Level 2	Level 3/Function
PHOTO SETUP	VIDEO OUTPUT	
AUDIO SETUP	<b>TV MODE</b>	WIDE TV / NORMAL TV
<b>VIDEO SETUP</b>	VIDEO FULL SCREEN	
PREFERENCES	DIVX SUBTITLE	Setting for TV mode.
EXIT	SUBTITLE LANGUAGE	
	MAIN PAGE	

## VIDEO SETUP – VIDEO FULL SCREEN

Level 1	Level 2	Level 3/Function
PHOTO SETUP	VIDEO OUTPUT	
AUDIO SETUP	TV MODE	WIDE (16:9) / NORMAL (4:3)
<b>VIDEO SETUP</b>	<b>VIDEO FULL SCREEN</b>	
PREFERENCES	DIVX SUBTITLE	Setting for aspect ratio.
EXIT	SUBTITLE LANGUAGE	
	MAIN PAGE	

## VIDEO SETUP – DIVX SUBTITLE

Level 1	Level 2	Level 3/Function
PHOTO SETUP	VIDEO OUTPUT	
AUDIO SETUP	TV MODE	ON / OFF
<b>VIDEO SETUP</b>	VIDEO FULL SCREEN	
PREFERENCES	<b>DIVX SUBTITLE</b>	On/Off the subtitle of DIVX video format.
EXIT	SUBTITLE LANGUAGE	
	MAIN PAGE	

## VIDEO SETUP – SUBTITLE LANGUAGE

Level 1	Level 2	Level 3/Function
PHOTO SETUP	VIDEO OUTPUT	
AUDIO SETUP	TV MODE	ENGLISH / 中文
<b>VIDEO SETUP</b>	VIDEO FULL SCREEN	
PREFERENCES	DIVX SUBTITLE	Select language subtitle of DIVX video format.
EXIT	<b>SUBTITLE LANGUAGE</b>	
	MAIN PAGE	

## PREFERENCES PAGE – OSD LANGUAGE

Level 1	Level 2	Level 3/Function
PHOTO SETUP	<b>OSD LANGUAGE</b>	
AUDIO SETUP	INFORMATION ROW	ENGLISH
VIDEO SETUP	HELP ROW	
<b>PREFERENCES</b>	FILE EDITING	Setting OSD Language
EXIT	FILE SORTING	
	AUTO START	
	SETUP VALUES	
	MAIN PAGE	

## PREFERENCES PAGE - INFORMATION ROW

Level 1	Level 2	Level 3/Function
PHOTO SETUP	OSD LANGUAGE	
AUDIO SETUP	<b>INFORMATION ROW</b>	ON / OFF
VIDEO SETUP	HELP ROW	
<b>PREFERENCES</b>	FILE EDITING	Display information or not in manual operate mode.
EXIT	FILE SORTING	
	AUTO START	
	SETUP VALUES	
	MAIN PAGE	

## PREFERENCES PAGE – HELP ROW

Level 1	Level 2	Level 3/Function
PHOTO SETUP	OSD LANGUAGE	ON / OFF
AUDIO SETUP	INFORMATION ROW	
VIDEO SETUP	<b>HELP ROW</b>	Display help or not in manual operate mode.
<b>PREFERENCES</b>	FILE EDITING	
EXIT	FILE SORTING	
	AUTO START	
	SETUP VALUES	
	MAIN PAGE	

## PREFERENCES PAGE – FILE EDITING

Level 1	Level 2	Level 3/Function
PHOTO SETUP	OSD LANGUAGE	ON / OFF
AUDIO SETUP	INFORMATION ROW	
VIDEO SETUP	HELP ROW	Non-active screen for user.
<b>PREFERENCES</b>	<b>FILE EDITING</b>	
EXIT	FILE SORTING	
	AUTO START	
	SETUP VALUES	
	MAIN PAGE	

## PREFERENCES PAGE – FILE SORTING

Level 1	Level 2	Level 3/Function
PHOTO SETUP	OSD LANGUAGE	A TO Z / Z TO A / RECENT DATA / OLDEST DATE
AUDIO SETUP	INFORMATION ROW	
VIDEO SETUP	HELP ROW	Setting the play sequence preference.
<b>PREFERENCES</b>	FILE EDITING	
EXIT	<b>FILE SORTING</b>	
	AUTO START	
	SETUP VALUES	
	MAIN PAGE	



## PREFERENCES PAGE – AUTO START

Level 1	Level 2	Level 3/Function
<div> <div>PHOTO SETUP</div> <div>AUDIO SETUP</div> <div>VIDEO SETUP</div> <div><b>PREFERENCES</b></div> <div>EXIT</div> </div>	<div> <div>OSD LANGUAGE</div> <div>INFORMATION ROW</div> <div>HELP ROW</div> <div>FILE EDITING</div> <div>FILE SORTING</div> <div><b>AUTO START</b></div> <div>SETUP VALUES</div> <div>MAIN PAGE</div> </div>	<p>OFF / PHOTO + MUSIC / PHOTO + VIDEO</p> <p>Auto start setting / power-on</p> <ul style="list-style-type: none"> <li>◆ <b>OFF</b>: manual.</li> <li>◆ <b>PHOTO + MUSIC</b>: Auto start Photo + Music.</li> <li>◆ <b>PHOTO + VIDEO</b>: Auto start Photo + Video.</li> </ul>

## PREFERENCES PAGE – SETUP VALUES

Level 1	Level 2	Level 3/Function
<div> <div>PHOTO SETUP</div> <div>AUDIO SETUP</div> <div>VIDEO SETUP</div> <div><b>PREFERENCES</b></div> <div>EXIT</div> </div>	<div> <div>OSD LANGUAGE</div> <div>INFORMATION ROW</div> <div>HELP ROW</div> <div>FILE EDITING</div> <div>FILE SORTING</div> <div>AUTO START</div> <div><b>SETUP VALUES</b></div> <div>MAIN PAGE</div> </div>	<p>DEFAULT</p> <p>Return to factory default set-up.</p>